

Telephone:
Fax:
VAT Registration No.:


Name:	Erasing	Manufacturer:	Volvo
Address:		Model:	
		Year:	1997
		Registration:	
Tel - Private:		Mileage:	
Tel - Business:		Job number:	

Erasing

- Ensure ignition switched OFF.
- Bridge data link connector (DLC) terminal with a switched lead - contacts normally open:
- Fuel system - terminals 3 & 5 [Fig. 1](#) .
- Ignition system - terminals 1 & 5 [Fig. 3](#) .
- Connect LED test lamp between data link connector (DLC) terminals:
- Fuel system - terminals 3 & 5 [Fig. 1](#) .
- Ignition system - terminals 1 & 5 [Fig. 3](#) .
- Access trouble codes.

NOTE: Trouble codes must be displayed at least once before they can be erased.

- Operate switch for approximately 5 seconds.
- Release switch.
- Wait for LED to illuminate.
- Operate switch for approximately 5 seconds.
- Release switch.
- Operate switch for approximately 1 second.
- Ensure trouble code 111 displayed.

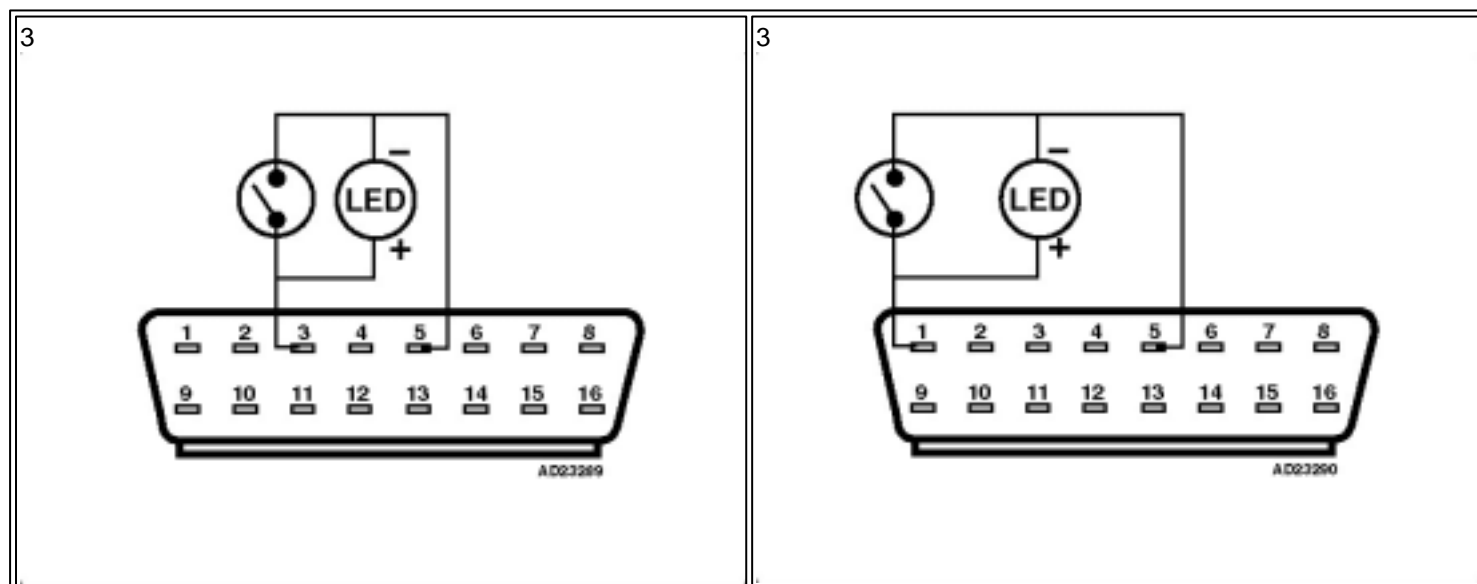

Manufacturer: Volvo
Engine code: B230FK

Model: 940 2,3 Turbo
Output: 99 (135) 4900

Year: 1995-98

© Autodata Limited 2004
2008/08/21

V5.373- /Autodata